

| A | Page # |
|-------------------------------|----------------------|
| Accelerator Pump Assembly | 01-08 |
| Advance Unit Assemblies | 15-015 |
| Air Cleaner Covers | 01-07 & 01-08 |
| Air Cleaner Kits | 01-03 & 01-04 |
| Air Cleaner Mounting Brackets | 01-05, 01-07 & 01-08 |
| Air Filter Covers | 01-05 |
| Air Filters | 01-06 & 01-08 |
| Air Temperature Sensor | 01-010 |
| Alternator Kits | 15-035 |
| Alternator Plug Retainer | 15-034 |
| Alternator Rotor Spacer | 15-036 |
| Armatures | 15-034 |
| Assembly Lubricant | 08-038 |
| Axle Adjusting Kits | 13-05 |
| Axle Cap Kits | 13-06 |
| Axle Spacers | 13-05 |
| Axles & Hardware | 13-04 |

| B | Page # |
|---------------------------------|---------------------------|
| Barometric Sensor | 01-010 |
| Batteries | 15-010 & 15-011 |
| Battery Cable Kits | 15-011 |
| Battery Covers | 15-013 |
| Battery Gauge | 15-012 |
| Battery Straps | 15-013 |
| Battery Tray Cushion Rubbers | 15-012 |
| Battery Tray Kit | 15-012 |
| Battery Tray Rubber Mounts | 15-012 |
| Belt Drives | 08-023 thru 08-30 |
| Belt Guards | 09-036 thru 09-039 |
| Belts | 09-029 thru 09-031 |
| Brake Bleeder Screw Cover | 11-06 |
| Brake Caliper Brackets | 11-06 |
| Brake Caliper Repair Kit | 11-06 |
| Brake Calipers | 11-03 thru 11-05 |
| Brake Drums | 11-06 |
| Brake Fluid | 11-016 & 16-08 |
| Brake Hardware | 11-010 & 11-011 |
| Brake Hose Clamp | 03-09, 10-015 & 11-020 |
| Brake Levers | 10-016 & 10-017 |
| Brake Lines & Fittings | 11-016 thru 11-018 |
| Brake Master Cylinder Covers | 11-020 |
| Brake Master Cylinder Reservoir | 11-020 |
| Brake Master Cylinders Front | 10-011 thru 10-014 |
| Brake Master Cylinders Rear | 11-015 |
| Brake Master Repair Kits | 11-019 |
| Brake Pads | 11-012 thru 11-014 |
| Brake Pedal Backing Plates | 12-04 |
| Brake Pedal Rubbers | 12-011 & 12-015 |
| Brake Push Rod | 11-09 |
| Brake Rotors | 11-07 thru 11-09 |
| Brake Shoes | 11-06 |
| Brake Tee' s | 11-020 |
| Bumper Rubbers | 12-020 |
| Bungee Cords | 16-08 |

| C | Page # |
|--------------|--------------------|
| Cable Clamps | 10-015 |
| Cable Guides | 05-03 & 10-021 |
| Cables | 10-018 thru 10-021 |

| | |
|-----------------------------------|--------------------|
| Cam Position Sensor | 08-08 |
| Camshaft Bearing | 08-08 |
| Camshaft Position Sensor Plates | 15-017 |
| Camshaft Support Plate | 08-07 |
| Carburetor Cover | 01-08 |
| Carburetor Kits | 01-09 |
| Carburetor Main Jet | 01-09 |
| Chain Guards | 09-036 thru 09-039 |
| Chain Lubricant | 08-038 |
| Chains | 08-033 & 09-032 |
| Choke Knob Cover | 05-03 & 10-021 |
| Circuit Breakers | 15-014 |
| Clutch | 09-08 & 09-09 |
| Clutch "Pull Easy" Kits | 09-015 |
| Clutch Adjusting Screws | 09-013 |
| Clutch Backing Plates | 09-014 |
| Clutch Bearing Big Fix Kit | 09-013 |
| Clutch Cables | 10-020 |
| Clutch Diaphragm Springs | 09-011 |
| Clutch Hardware Kits | 09-033 |
| Clutch Hub Nuts | 09-013 |
| Clutch Hubs | 09-012 |
| Clutch Levers | 10-016 & 10-017 |
| Clutch Master Cylinders | 10-011 thru 10-014 |
| Clutch Perch Assembly | 10-012 |
| Clutch Pivot Pin | 10-017 |
| Clutch Pressure Plates | 09-09 thru 09-011 |
| Clutch Pull Rod | 09-015 |
| Clutch Release Finger | 09-013 |
| Clutch Release Kits | 09-015 |
| Clutch Release Levers | 09-015 |
| Clutch Release Plate | 09-013 |
| Clutch Roller Bearing Retainer | 09-014 |
| Clutch Throw Out Bearing Kit | 09-014 |
| Coil & Ignition Relocation Switch | 04-024 |
| Coil Brackets | 15-028 |
| Coil Covers | 15-029 |
| Coils | 15-023 thru 15-026 |
| Compensating Sprocket Kits | 08-032 |
| Compensating Sprocket Sliding Cam | 08-033 |
| Compression Release Valve | 08-011 |
| Crankcase Breathers | 01-07 & 01-08 |

| D | Page # |
|-----------------------|--------------------|
| Dash Indicator lights | 05-05 |
| Dash Kits | 05-02 & 05-04 |
| Dash Panels | 05-02 |
| Dash Rubber Trim | 05-02 |
| Dealer Signs | 16-08 |
| Debris Deflector | 02-059 |
| Derby Covers | 08-031 |
| Drive Belts | 09-029 thru 09-031 |
| Drive Chains | 09-032 |

| E | Page # |
|-----------------------------|--------------------|
| Engine Bearing Retainer | 08-011 |
| Engine Cylinder Base Covers | 08-017 |
| Engine Cylinders | 08-06 |
| Engine Drain Plugs | 08-011 |
| Engine Gaskets & Seals | 08-041 thru 08-060 |
| Engine Hardware Kits | 08-039 & 08-040 |
| Engine Mount Adaptor | 08-05 |
| Engine Mount Covers | 08-05 |

| | |
|---------------------------------|--------------------|
| Engine Mounts | 08-03 thru 08-05 |
| Engine Nose Cones | 08-08 |
| Engine Oil | 08-037 & 08-038 |
| Engine Skid Plate | 08-011 |
| Engine Sprockets | 08-032 & 08-033 |
| Engine Temperature Sensor | 08-011 |
| Engine Umbrella Valves | 08-07 |
| Exhaust Baffles | 01-018 & 01-019 |
| Exhaust Clamps | 01-022 |
| Exhaust Flange nuts & Bolts | 01-011 |
| Exhaust Flange Snap Rings | 01-022 |
| Exhaust Gaskets | 01-022 |
| Exhaust Heat Shields | 01-022 |
| Exhaust Insulating Wrap | 01-020 |
| Exhaust Insulating Wrap Coating | 01-021 & 16-08 |
| Exhaust Mounting Brackets | 01-019 |
| Exhaust Pipe Builders Kit | 01-021 |
| Exhaust Power Cones | 01-022 |
| Exhaust Wrap Snap Straps | 01-021 |
| Exhausts Pipes & Mufflers | 01-012 thru 01-019 |
| Extended Sprocket Shafts & Nuts | 08-036 |

F _____ Page

| | |
|---------------------------------|------------------------------|
| Fender Braces | 07-020 |
| Fender Mountings Springer | 03-05 & 07-023 |
| Fender Spacers | 07-023 |
| Fender Struts | 07-024 |
| Fender Trims | 07-025 |
| Fenders | 07-02 thru 07-022 |
| Floor Board Rubbers | 12-020 |
| Floor Boards | 12-020 |
| Foot Peg Clevis Set | 12-019 |
| Foot Peg Mountings | 12-019 |
| Foot Pegs | 12-08, 12-012 thru 12-019 |
| Foot Rest Rubbers | 12-014 |
| Fork Assemblies | 03-02 thru 03-06 |
| Fork Boots | 03-08 |
| Fork Bushes | 03-06 |
| Fork Dampers | 03-07 |
| Fork Lock & Stem Nut Covers | 03-016 |
| Fork Oil | 03-010 |
| Fork Seal Retaining Ring | 03-09 |
| Fork Seals | 03-06 & 03-09 |
| Fork Springs | 03-08 |
| Fork Stem Nut Covers | 03-016 |
| Fork Stops | 03-09 |
| Fork Tube Bolts | 03-08 |
| Fork Tube Covers | 03-09 |
| Fork Tube Plugs | 03-08 |
| Fork Tube Tubes | 03-06 & 03-07 |
| Forward Control Extension Kits | 12-03 & 12-04 |
| Forward Control Relocation Kits | 12-04 |
| Forward Controls | 12-02 thru 12-09 |
| Frames | 02-03 thru 02-049 |
| Front Axles | 13-04 |
| Front Pulley Inserts | 08-035 |
| Fuel Filters | 01-09, 01-010 & 01-027 |
| Fuel Hose & Ends | 04-029 |
| Fuel Injection Kit | 01-09, 15-017 thru 15-023 |
| Fuel Injectors | 01-010 |
| Fuel Pressure Regulators | 01-010 |

G _____ Page

| | |
|---------------------------|--------------------|
| Gas Cap Covers | 04-025 |
| Gas Caps | 04-025 thru 04-027 |
| Gas Tank Bungs | 04-030 |
| Gas Tank Mounting Kits | 04-024 |
| Gas Tank Mounting Rubbers | 04-024 |
| Gas Tank Repair Kit | 04-030 & 16-09 |
| Gas Tanks | 04-02 thru 04-023 |
| Generator Covers | 15-035 |
| Generator Field Coils | 15-034 |
| Generators | 15-035 |
| Grips | 10-08 thru 10-10 |

H _____ Page

| | |
|-----------------------------------|----------------------------------|
| Handlebar Clamps | 10-05 & 10-06 |
| Handlebar Control Kits | 10-012 & 10-014 |
| Handlebar Dampening Kits | 10-06 & 10-07 |
| Handlebar End Caps | 10-08 & 10-016 |
| Handlebar Grips | 10-08 thru 10-10 |
| Handlebar Hardware | 10-07 |
| Handlebar Levers | 10-016 & 10-017 |
| Handlebar Riser Adaptors | 10-06 |
| Handlebar Risers | 10-05 & 10-06 |
| Handlebar Switch Covers | 15-05 & 15-06 |
| Handlebar Switch Housings | 15-05 & 15-06 |
| Handlebar Switch Retaining Plates | 15-04 |
| Handlebar Switches | 15-02 thru 15-05 |
| Handlebar Throttle Boss | 10-08 |
| Handlebar Wiring Harness | 15-04 |
| Handlebars | 10-03 & 10-05 |
| Hardware Kits | 16-037 thru 16-042 |
| Harness Controller | 05-04 |
| Head Bolt Covers | 08-011 |
| Head Cone Upper Seat | 03-016 |
| Headcup Dust Shield | 03-016 |
| Headcups & Bearings | 03-015 & 03-016 |
| Headlight Buckets | 14-08 |
| Headlight Bulbs | 14-011 |
| Headlight Housing Conversion Kit | 14-010 |
| Headlight lens | 14-07 |
| Headlight Mountings | 14-03, 14-04, 14-010 & 14-011 |
| Headlight Trims | 14-010 |
| Headlights | 14-03 thru 14-06 |
| Heel Rests | 12-016 |
| Highway Cruiser Bars | 12-018 |
| Highway Peg Brackets | 12-019 |
| Horns | 15-06 |
| Hypercharger Trap Doors | 01-06 |
| Hyperchargers | 01-06 |

I _____ Page

| | |
|----------------------------------|----------------------------|
| Idle Cables | 10-019 |
| Ignition Advance Unit Assemblies | 15-015 |
| Ignition Coil Brackets | 15-028 & 15-029 |
| Ignition Coil Covers | 15-029 |
| Ignition Coils | 15-023, 15-025 & 15-026 |
| Ignition Condensers | 15-016 |
| Ignition Leads | 15-023 thru 15-025 |
| Ignition Module Cover | 15-029 |

| | |
|-----------------------------------|-----------------|
| Ignition Modules | 15-022 |
| Ignition Points | 15-016 |
| Ignition Switch Relocation Covers | 15-02 |
| Ignition Switches | 15-02 |
| Inlet Manifold Seals | 01-011 |
| Inner Primary Bearing & Seal Kits | 08-019 |
| Inner Primary Covers | 08-016 & 08-019 |
| Inner Tubes | 13-015 |
| Inspection Covers | 08-031 |
| Inspection Sticker Plate | 16-08 |
| Instrument Bracket Tree | 05-03 |
| Instruments & Wiring | 05-04 |

K

Page #

| | |
|--------------------------------|--------------------|
| Kickstand Brackets | 02-058 |
| Kickstand Extensions | 02-058 |
| Kickstand Spring Anchor Plates | 02-058 |
| Kickstand Springs | 02-058 |
| Kickstand Stops | 02-058 |
| Kickstand Wedge | 02-058 |
| Kickstands | 02-055 thru 02-057 |
| Kickstart Arms | 09-034 |
| Kickstart Covers | 09-034 |
| Kickstart Gears | 09-035 |
| Kickstart Pedals | 09-034 |
| Kickstart Shaft Bushes | 09-035 |
| Kickstart Shafts | 09-035 |
| Kickstart Spring Covers | 09-035 |
| Kickstart Springs | 09-035 |

L

Page #

| | |
|--|--------------------|
| LED Bulbs | 14-011 |
| Levers for Clutch and Brakes | 10-016 & 10-017 |
| License Plate Backing Plates | 14-016 |
| License Plate Brackets | 14-014 & 14-022 |
| License Plate Frames | 07-025 |
| License Plate Holders with Tail lights | 14-019 thru 14-021 |
| License Plate Mounts | 07-025 |
| Light Bulbs | 14-011 |
| Lighting LED Accent Kits | 14-017 & 14-018 |
| Lowering Kits for Softails | 02-053 & 02-066 |
| Lubricants | 16-030 thru 16-032 |

M

Page #

| | |
|--------------------------------|--------------------|
| Mainshaft Bearing Clips | 08-021 |
| Mainshaft Support Bearing | 08-021 |
| Manifold Clamps | 01-011 |
| Marker Lights | 14-012 & 14-013 |
| Master Cylinder Brake Plunger | 11-09 |
| Master Cylinder Covers | 11-020 |
| Master Cylinder Repair Kits | 11-019 |
| Master Cylinders Front | 10-011 thru 10-014 |
| Master Cylinders Rear | 11-015 |
| Mirror Clamps & Extensions | 10-029 |
| Mirrors | 10-022 thru 10-029 |
| Motor Mount Adaptor - Twin Cam | 08-05 |
| Motor Mount Covers | 08-05 |
| Motor Mounts | 08-03 thru 08-05 |

O

Page #

| | |
|-----------------------------------|-----------------------|
| Oil | 08-037 & 08-038 |
| Oil Filler Caps | 06-08 |
| Oil Filter & Regulator Bracket | 08-013 |
| Oil Filter Housing Covers | 08-015 |
| Oil Filter Housings | 08-015 |
| Oil Filter Magnetic Double Action | 08-015 |
| Oil Filter Spin On Kits | 08-013 |
| Oil Filters | 08-012 & 08-013 |
| Oil Fittings | 06-010 thru 06-012 |
| Oil Fittings | 16-033 & 16-034 |
| Oil Lines & Ends | 06-011 & 08-014 |
| Oil Pressure & Speedo Gauge Kit | 06-09 & 06-010 |
| Oil Pressure Gauge Bracket | 06-09 |
| Oil Pressure Gauges | 06-010 |
| Oil Pressure Lines | 08-011 & 08-014 |
| Oil Pressure Switches | 06-07, 08-015 & 15-08 |
| Oil Pump Covers | 08-015 |
| Oil Pumps | 08-015 |
| Oil Tank Mounting Brackets | 06-08 |
| Oil Tank Rubber Mounts | 06-011 |
| Oil Tanks | 06-02 thru 06-07 |
| Oil Temperature Gauge | 06-08 |
| Outer Primary Covers | 08-016 thru 08-018 |

P

Page #

| | |
|-------------------------------|--------------------|
| Petcocks | 04-028 & 04-029 |
| Pivot Axle Kit | 02-059 |
| Pivot Bolt Covers | 02-059 |
| Point Covers | 08-031 |
| Points | 15-016 |
| Primary Adjusting Shoes | 08-016 |
| Primary Bearing & Seal Kits | 08-019 |
| Primary Case Oil | 08-038 |
| Primary Chains | 08-033 |
| Primary Covers | 08-016 thru 08-020 |
| Primary Drain Plug | 08-019 |
| Primary Drive Kits | 08-020 thru 08-022 |
| Primary Inspection Covers | 08-031 |
| Primary Lock Tabs - Inner | 08-016 |
| Primary Offset Kits | 08-021 & 08-022 |
| Primary Oil Seal | 08-022 |
| Primary Shifter Shaft Bushing | 08-016 |
| Primary Spacers | 08-034 & 08-035 |
| "Pulleys, Spacers & Inserts" | 09-025 thru 09-027 |
| Push Rod Covers | 08-09 |
| Push Rod Kit | 08-010 |
| Push Rod Tubes | 08-09 |

R

Page #

| | |
|----------------------|--------------------|
| Rear Axle Nuts | 13-04 |
| Rear Axles | 13-04 |
| Rear Pulley Inserts | 09-027 |
| Rear Pulley Spacers | 09-025 |
| Rear Pulleys | 09-025 & 09-026 |
| Rear Sprockets | 09-023 thru 09-027 |
| Rear Wheel Adjusters | 13-05 |
| Regulator Bracket | 15-029 |
| Regulators | 15-036 thru 15-039 |
| Relays | 15-014 |

| | |
|--------------------------|---------------|
| Rocker Arm Support Plate | 08-07 |
| Rocker Arms | 08-07 |
| Rocker Cover Hardware | 08-06 |
| Rocker Cover Spacers | 08-06 |
| Rocker Covers | 08-07 & 08-08 |
| Roller Bearing Retainer | 08-011 |

S _____ Page

| | |
|------------------------------|---------------------------------------|
| Seat Brackets | 16-07 |
| Seat Mounting Hardware | 16-07 |
| Seat Mounting Kits | 16-06 |
| Seat Pillion Pads | 16-03 |
| Seat Quick Release Pins | 16-07 |
| Seat Springs | 16-07 |
| Seats | 16-03 thru 16-07 |
| Shift Levers | 09-016 |
| Shift Pegs | 09-017, 12-010, 12-012 thru 12-017 |
| Shifter Rod End | 12-010 |
| Shifter Rods | 12-010 & 12-011 |
| Shock Covers | 02-060 |
| Shock Studs & Hardware | 02-060 |
| Shocks - Air Adjustable | 02-065 |
| Shocks - Rear | 02-061 thru 02-66 |
| Sissy Bars | 07-020 |
| Spark Plug Covers | 08-011 |
| Spark Plugs | 15-027 |
| Speedo Adapter Ring Kit | 05-03 |
| Speedo Cable Ferrule Cover | 05-03 & 10-021 |
| Speedo Cable Guide | 05-03 |
| Speedo Cables | 10-020 |
| Speedo Drives | 05-08 |
| Speedo Kit - Rear Wheel | 05-08 |
| Speedo Mounting Kits | 05-03 |
| Speedo Pickups | 05-05 |
| Speedo Sensor Cover | 09-07 |
| Speedos | 05-06 & 05-07 |
| Spotlight Lens | 09-014 |
| Spotlight Mounting Brackets | 14-05 & 14-011 |
| Spotlights | 14-08 |
| Sprocket Covers | 08-08 |
| Sprocket Nuts | 09-020 |
| Sprocket Shaft Extension | 08-036 |
| Sprocket Shafts | 08-036 |
| Sprockets | 08-032 & 08-033 |
| Starter Bushes | 08-022 |
| Starter Button | 15-03 |
| Starter Coupler | 08-021 & 15-033 |
| Starter Drive Assemblies | 15-032 |
| Starter Gear Lever | 15-033 |
| Starter Jackshaft Kit | 15-033 |
| Starter Motor Housings | 15-033 |
| Starter Motors | 15-030 & 15-031 |
| Starter Oil Deflector Plate | 15-030 |
| Starter Pinion Gear | 08-029 & 15-033 |
| Starter Repair Kit | 15-032 |
| Starter Shaft | 15-032 |
| Starter Solenoid Covers | 15-030 |
| Starter Solenoid End Rubbers | 15-030 |
| Starter Solenoid Repair Kit | 15-032 |
| Starter Solenoids | 15-032 |
| Stator Installation Kit | 15-036 |
| Stator Rotors | 15-036 |
| Stators | 15-034 |
| Steering Stops | 03-015 |

| | |
|------------------------------|----------------------|
| Stop Light Switches | 15-02, 15-03 & 15-08 |
| Swingarm Bearing Kits | 02-054 |
| Swingarm Bolts | 02-059 |
| Swingarm Bumper Rubbers | 02-054 |
| Swingarm Covers | 02-059 & 10-010 |
| Swingarm Kits for Wide Tires | 02-051 thru 02-054 |
| Swingarm Pivot Axle kit | 02-059 |
| Swingarm Pivot Bolt Covers | 02-059 |
| Swingarms | 02-050 |
| Switch Housings | 10-015 |
| Switches | 15-02 thru 15-08 |

T _____ Page

| | |
|--|----------------------|
| Tachometers | 05-06 thru 05-08 |
| Tail Light Brackets | 14-016 |
| Tail Light Grills | 14-016 |
| Tail Lights | 14-014 & 14-015 |
| Throttle Assembly | 10-10 |
| Throttle Cables | 10-018 |
| Throttle Grips | 10-08 thru 10-10 |
| Throttle Position Sensor | 01-010 |
| Tie Downs | 08-06 |
| Transmission Conversion Kit | 09-05 & 09-06 |
| Transmission Drain Plugs | 09-018 |
| Transmission End Cover | 09-019 |
| Transmission Gaskets & Seals | 08-046 thru 08-049 |
| Transmission Gears | 09-018 |
| Transmission Main Shaft | 09-018 |
| Transmission Mainshaft Bearing Clips | 08-021 |
| Transmission Mainshaft Support Bearing | 08-021 |
| Transmission Mounting Plate | 02-059 & 09-018 |
| Transmission Neutral Switches | 09-07, 15-07 & 15-08 |
| Transmission Oil | 09-028 |
| Transmission Pickups | 05-05 & 09-07 |
| Transmission Pulleys | 09-021 & 09-022 |
| Transmission Shift Forks | 09-018 |
| Transmission Speedo Drive Unit | 05-08 |
| Transmission Sprocket Nut | 09-020 |
| Transmission Sprockets | 09-020 thru 09-023 |
| Transmission Top Cover | 09-019 |
| Transmissions | 09-02 thru 09-04 |
| Triple Trees | 03-010 thru 03-014 |
| Turn Signal Mounting Bars | 14-014 |
| Turn Signals | 14-012 & 14-013 |

W _____ Page

| | |
|---------------------------|--------------------|
| Water Proof Grease | 16-032 |
| Wheel Bearing Grease | 13-03 |
| Wheel Bearing Kits | 13-03 |
| Wheel Hub Oil Seals | 13-03 |
| Wheel Hub Spacers | 13-06 |
| Wheel Hubs | 13-03 |
| Wheel Rim Strips | 13-015 |
| Wheel Spacer | 13-06 |
| Wheel Spokes | 13-015 |
| Wheels Billet Aluminum | 13-07 thru 13-010 |
| Wheels Spoked | 13-011 thru 13-014 |
| Wiring Harness | 15-017 |
| Wiring Harness Controller | 05-04 |