


Part Number : 20032
CHROME PLATED DASH FOR LARGE
1995 TO PRESENT SPORTSTER SPEEDO

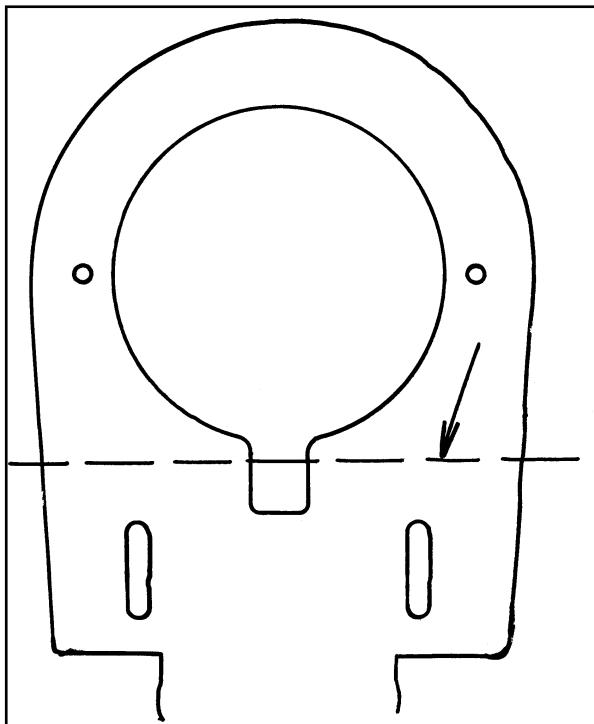

INSTALLATION INSTRUCTIONS FOR ZPN 345276 AS SUPPLIED WITH GAS TANK

To fit this dash panel kit on 1996 to present models it is required to modify it as on the sketch.

1. Cut with a metal hacksaw as indicated.
2. Use touch up paint to protect and seal off the bare metal edge
3. Allow to dry
4. Use superglue in order to keep the rubber seal in place