


Part Number : 23119

SUPER-ASS TRANSMISSION MOUNT KIT

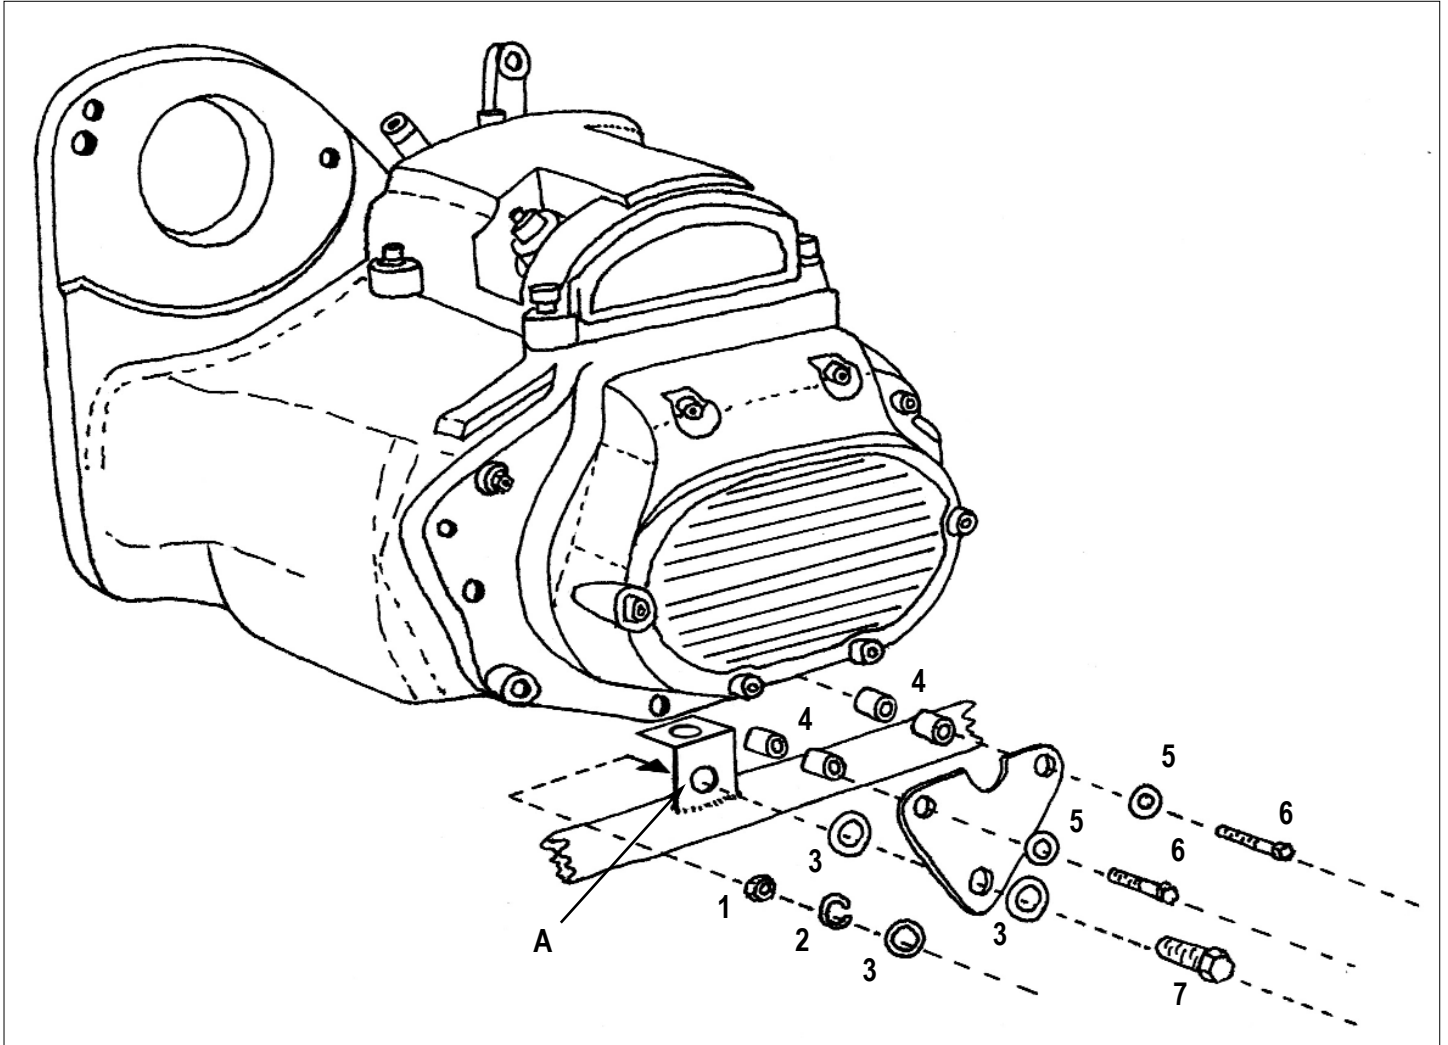

Nr.	Description	Qty. needed
1.	Nut 3/8" UNF	1
2.	Spring Washer 3/8"	1
3.	Washer 3/8"	3
4.	Spacer	4
5.	Washer 5/16"	2
6.	Hex Head Bolt 5/16 UNC x 2 1/4"	2
7.	Hex Head Bolt 3/8" UNF x 1	1
A.	Drill 3/8" hole in OEM frame bracket	-